

J's Work PPA5167 Airbrush CAMO-MASK for 1/35 AMX13/75 Camouflage Scheme 1



Cena :

38,00 PLN

Producent : **J's Work**

Dostępność : **Jest**

Stan magazynowy : **niski**

Średnia ocena : **brak recenzji**

J's Work PPA5167 Airbrush CAMO-MASK for 1/35 AMX13/75 Camouflage Scheme 1

Samoprzylepne maski ułatwiające malowanie aerografem skomplikowanych wzorów kamuflażu. Skala 1:35


Producent: **J's Work** (China)

Polecamy!

Airbrush CAMO-MASK for 1/35 AMX13/75 Camouflage Scheme 1

Item No. 5167

- Matt Black ★
- Yellow Grey
- US Oliver Drab
- Earth

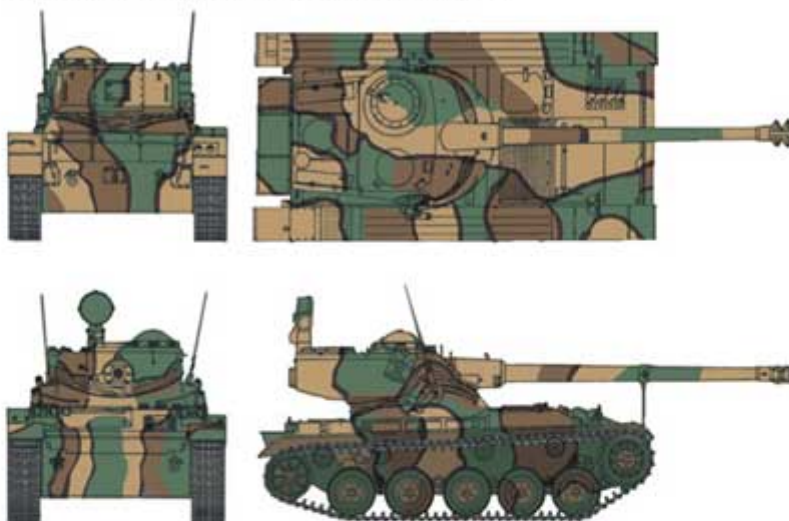

REMARKS:
Suggest using Airbrush Camo-Mask marked with asterisk (★) to be the first camouflage color and the first Mask adhere on model.

User Guide



1 Select suitable Airbrush Camo-Mask for the model. Spray the first camouflage color on model. In order to make the spraying procedure smoothly, suggest using Airbrush Camo-Mask marked with asterisk (★) to be the first camouflage color.



2 Suggest using Mask marked with asterisk (★) inside the Airbrush Camo-Mask to be the first Mask adhere on model. Position lines have been marked on the Mask which can help to fix the position.



3 Please follow the color guide to complete the procedure of using the Airbrush Camo-Mask.



4 Use scissor or cutter to cut the Airbrush Camo-Mask if it cannot be adhere on the unflatten area of model. Then, use tape or liquid mask fill up the gap.



5 The liquid mask can be used to fill up the gap between the first and second color of Airbrush Camo-Mask.



6 Adhere the Airbrush Camo-Mask on wheels after spraying the outer ring of wheels in black color. Then, spray the color on wheel. (If this Mask is included in the kit).



7 Remove all the Airbrush Camo-Mask after spraying the last camouflage color on model.



8 Spot-Pattern Masking Paper can be used for spraying the spot pattern (if Spot-Pattern Masking Paper is included in the kit).

Please visit our website

www.jsworkmodel.com

14+

Kit suitable for ages 14 to adult.

MADE IN CHINA

